



## Firmware Update Procedures


1. Unzip the downloaded firmware file to your desktop
2. Log into the camera and go to Advanced → System → Maintenance section

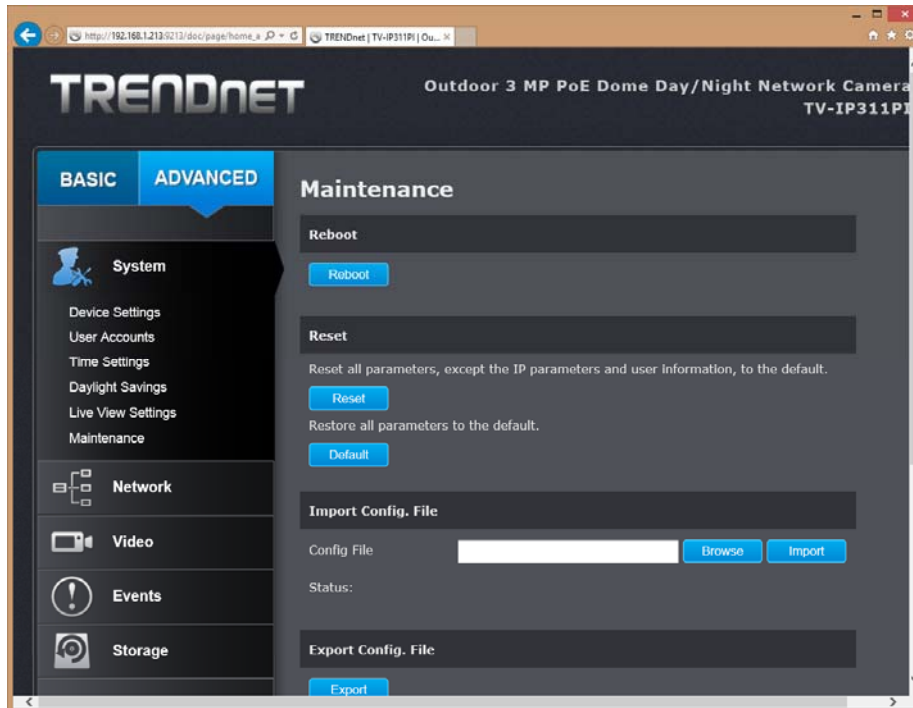


3. Go to firmware section and click on Browse to select the new firmware to load

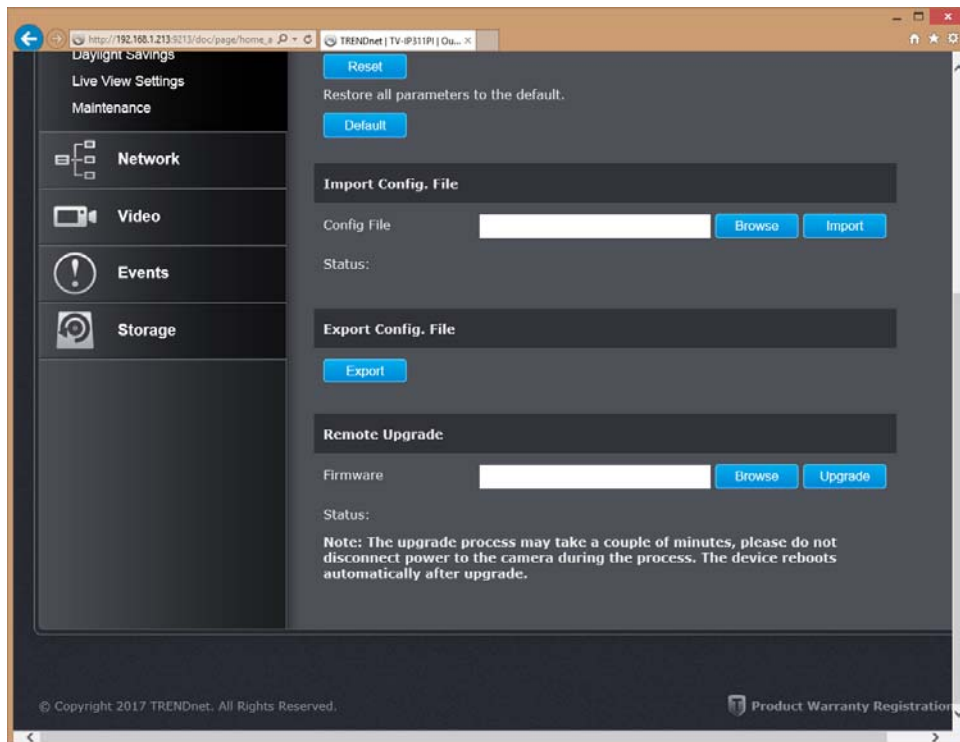

4. Select the unzipped firmware file and click on Upgrade, the camera will reboot after firmware is loaded.

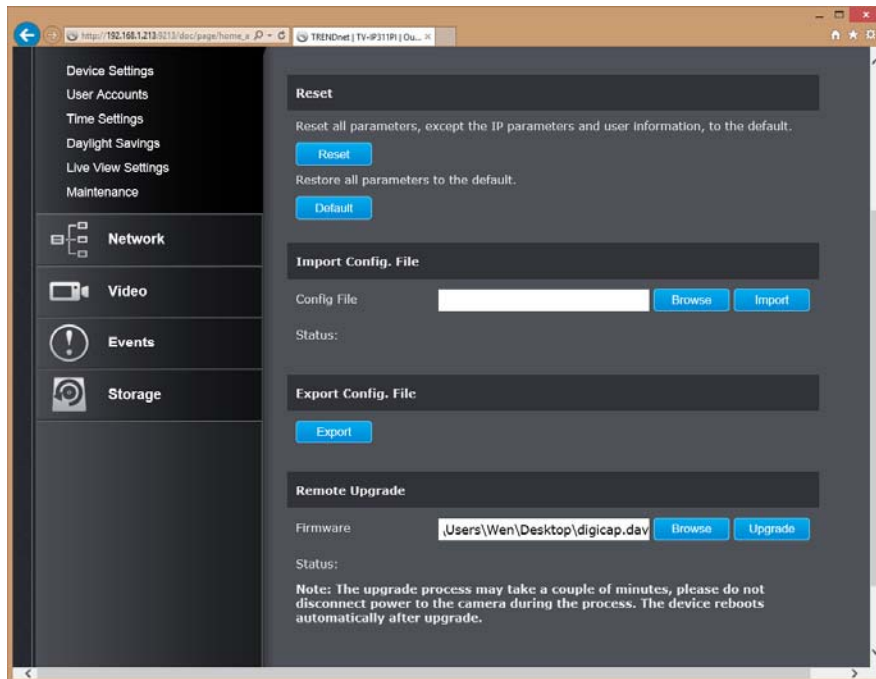

5. When the camera is restarted, you can either access the camera with the original IP address or search through the utility. (The utility can be downloaded at <http://www.trendnet.com/camerautility>) The camera will appear as inactive, double click on the IP address to access the camera, setup a new password then the camera is back to active.

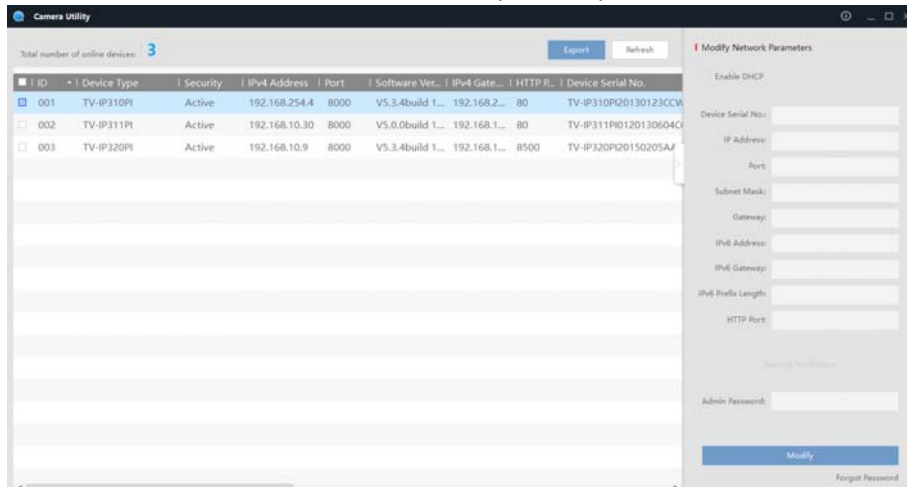

6. Firmware upgrade is complete.